

TRAMPA™

HOW TO: FIT GRIPTAPE TO TRAMPA WINGS




Parts / tools Required;

- 1 TRAMPA WING concave foot riser pad
- 2 10 x 11" High Quality GRIP TAPE
- 3 PRECISION / NEEDLE FILE
- 4 SHARP BLADE



1 Start by lining up the edge of the grip tape to the bottom edge of the WING

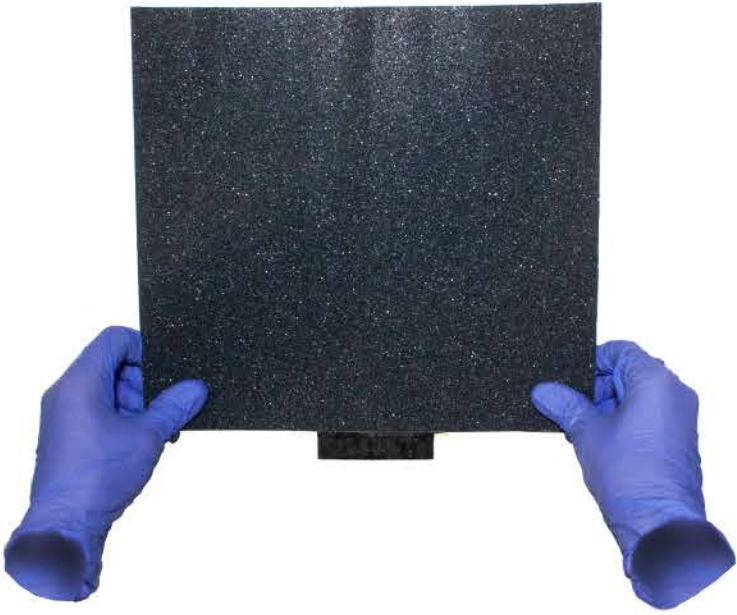

2 Expose the adhesive & Stick the Grip tape to the WING



(Ensure that all air bubbles are pushed out, and the grip follows the concave)

3 File around the edges of the WING, until a clear white outline appears



4 Keep filing until you can clearly see the shape of the WING



Tear the grip tape edges to ensure you can file the inside the fins.

5 Start carefully cutting around the outline, sticking to the outer edge



6 Cut around the entire WING, use the file to neaten up any rough edges



ALL DONE.

