

BINDING DRILL PATTERN

35 DEGREE LONG - LEFT FOOT

THIS IS OUR STANDARD DRILL PATTERN, AND SHOULD BE USED AS A GUIDE. YOU CAN ALTER THIS GUIDE TO SUIT YOUR PREFERENCES

INSTRUCTIONS

PRINT THIS DOCUMENT AT 100% SIZE, CUT OFF THE SHADED WASTE AREAS AND LINE UP THE DECK EDGES AND DECK CREASE.

USE A 3MM DRILL BIT, THROUGH THE TEMPLATE TO MAKE ACCURATE PILOT HOLES

USE A 6MM DRILL BIT TO EXPAND THESE HOLES TO THE REQUIRED SIZE.

USE A COUNTERSINKING DRILL BIT, DRILLED FROM THE BOTTOM OF THE DECK ALLOWING THE BOLT HEADS TO SIT FLUSH WITH THE BOTTOM OF THE DECK.

Toeside Deck Edge

55mm to Deck Edge

Deck Crease

195mm Across

STANCE ADJUSTMENT

YOUR L BRACKETS HAVE ADJUSTMENT HOLES TO CUSTOMISE YOUR STANCE WIDTH, FOOT WIDTH AND ANGLE.

BY DRILLING YOUR STANCE WITH AN ANGLE CAN FURTHER THIS ADJUSTMENT


IF YOU INTEND TO DRILL CLOSE TO THE DECK CREASE, ENSURE THERE IS ENOUGH ROOM FOR THE L BRACKET.

20mm Gap centre to centre

30mm

55mm to Deck Edge

Heelside Deck Edge

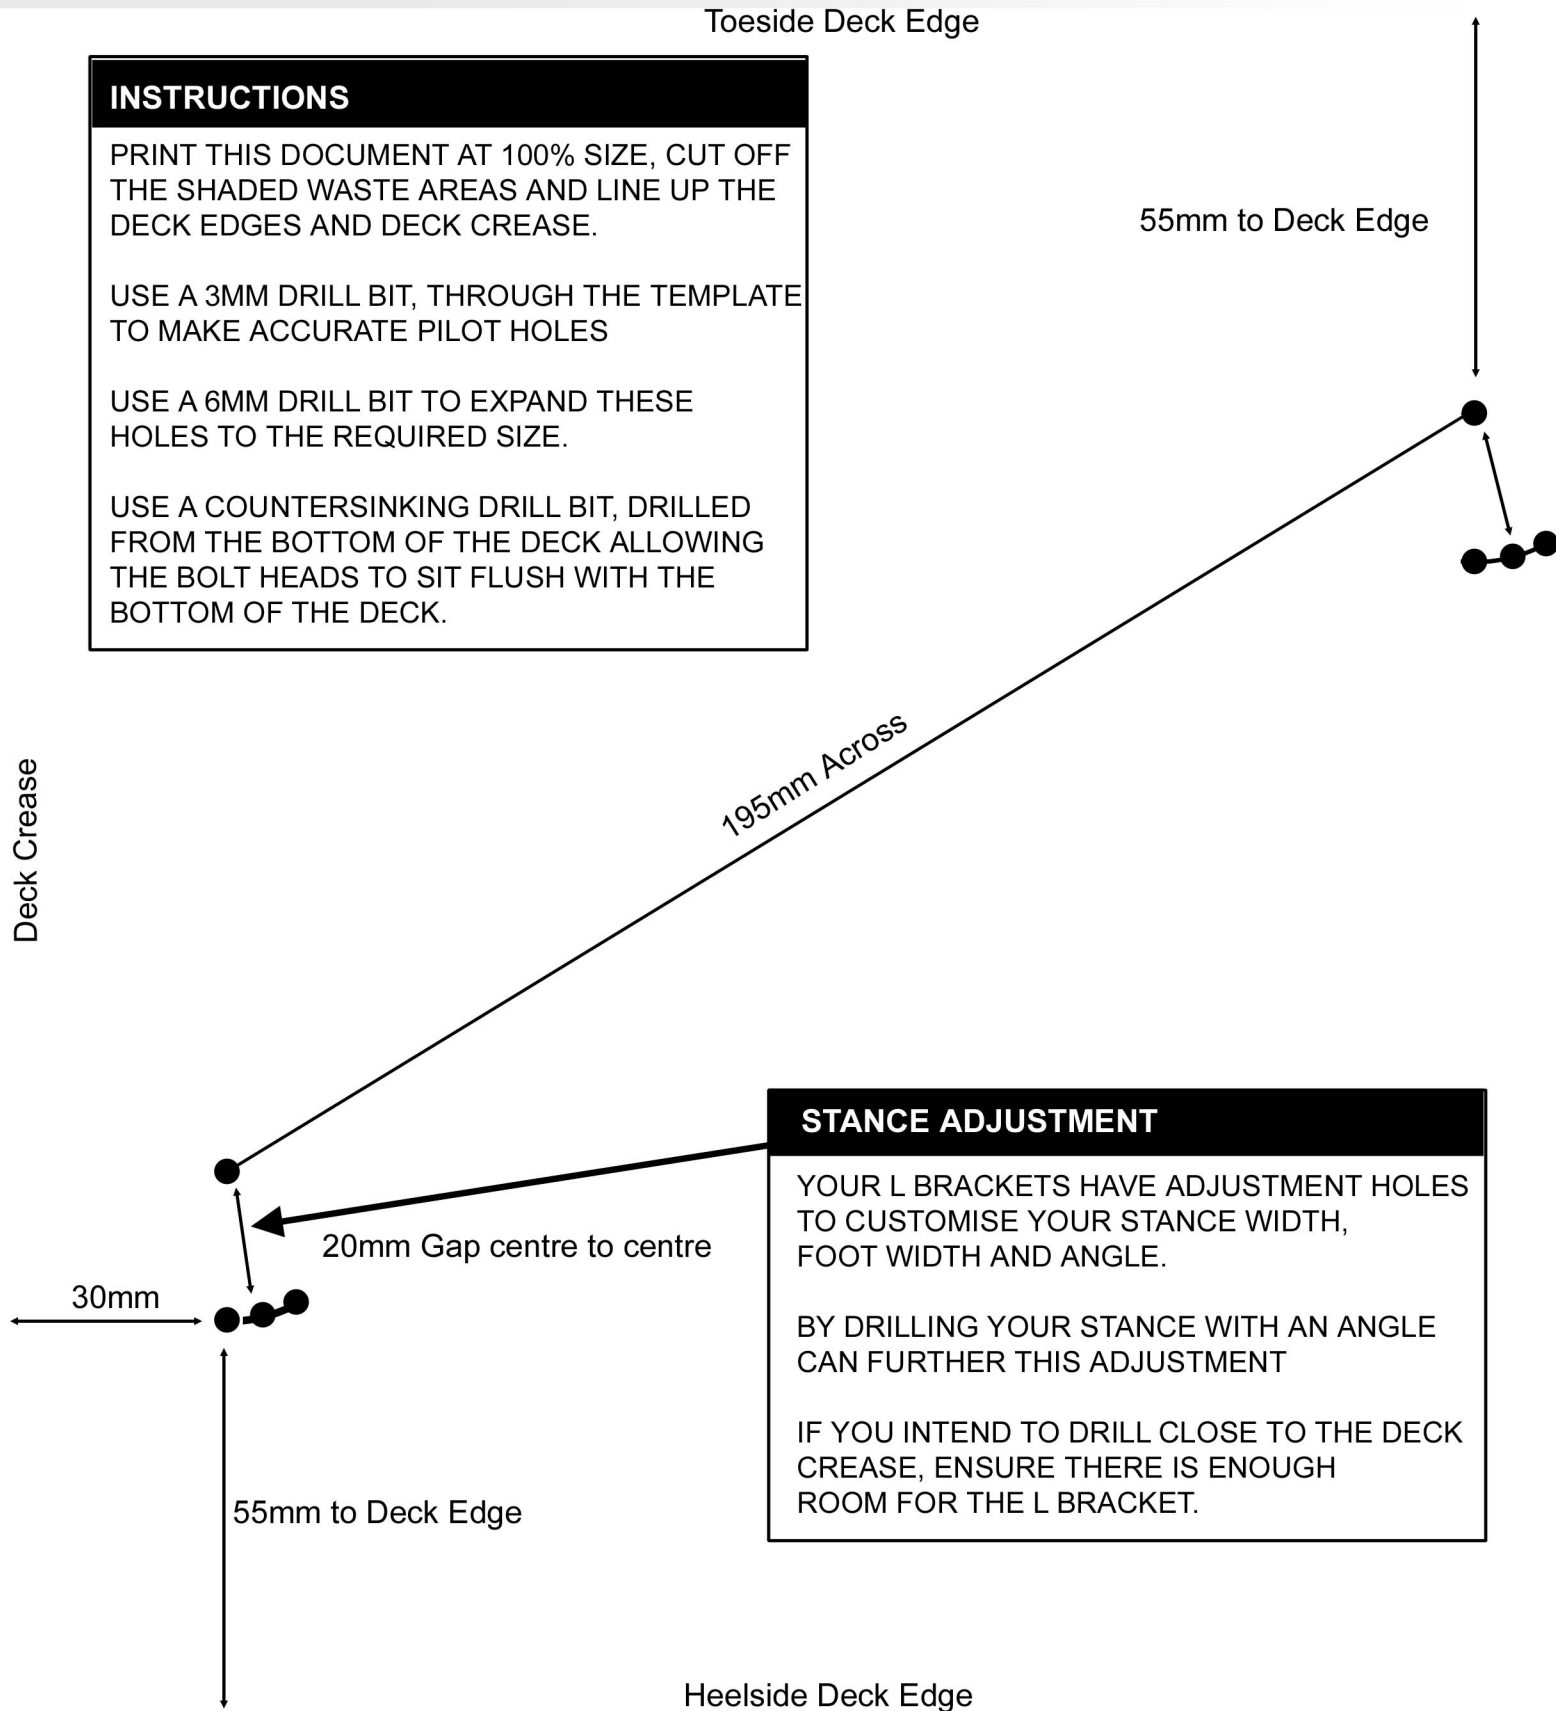

BINDING DRILL PATTERN

35 DEGREE LONG - RIGHT FOOT

