

# 35° SHORT




**USE THIS TEMPLATE AS  
A GUIDE ONLY**

**Use HSS (metal)  
drill bits**

**Truck possision / Hole pattern  
Drill template**

*Use a ruler to check measurements  
are correct before drilling*

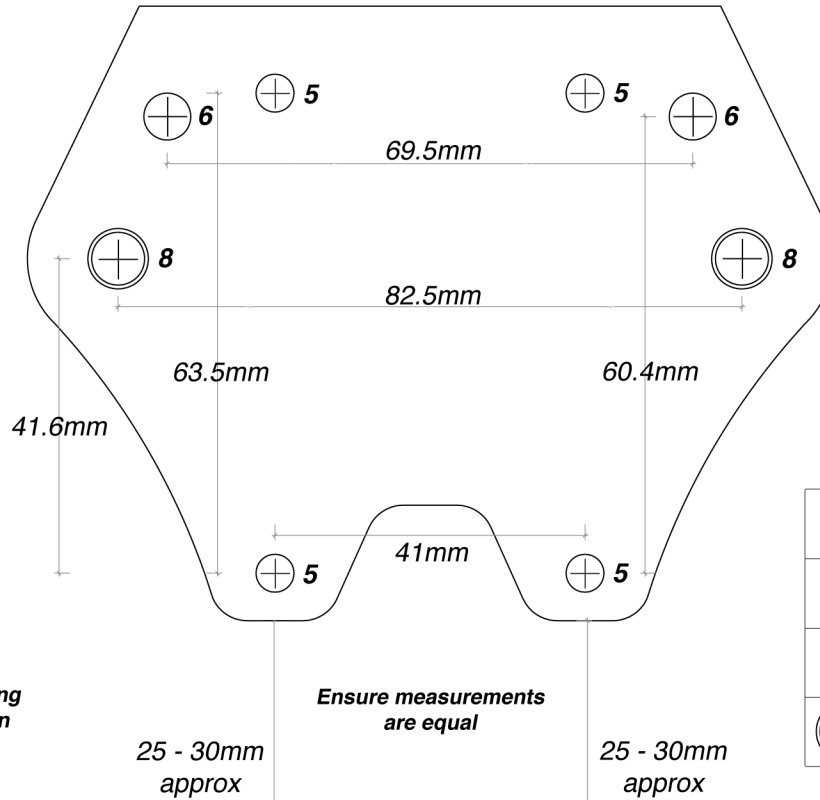

+	= 2mm pilot hole
○ 5	= 5mm hole
○ 6	= 6mm hole
○ 8	= 8mm hole

*Failure to folow this guide will bring  
changes to flexometer infomation*

*Ensure measurements  
are equal*

*25 - 30mm  
approx*

*25 - 30mm  
approx*

*Crease line*

*Crease line*

**You can assume the crease on the underside of the deck is streight  
Use this streight line to make your measurements**

**Check correct scaling and mesure this length! When printing this page, make sure 'Page scaling' is set to 'None'**

